MOOG Videolarm

2009-2010, Moog Videolarm, Inc. All Rights Reserved

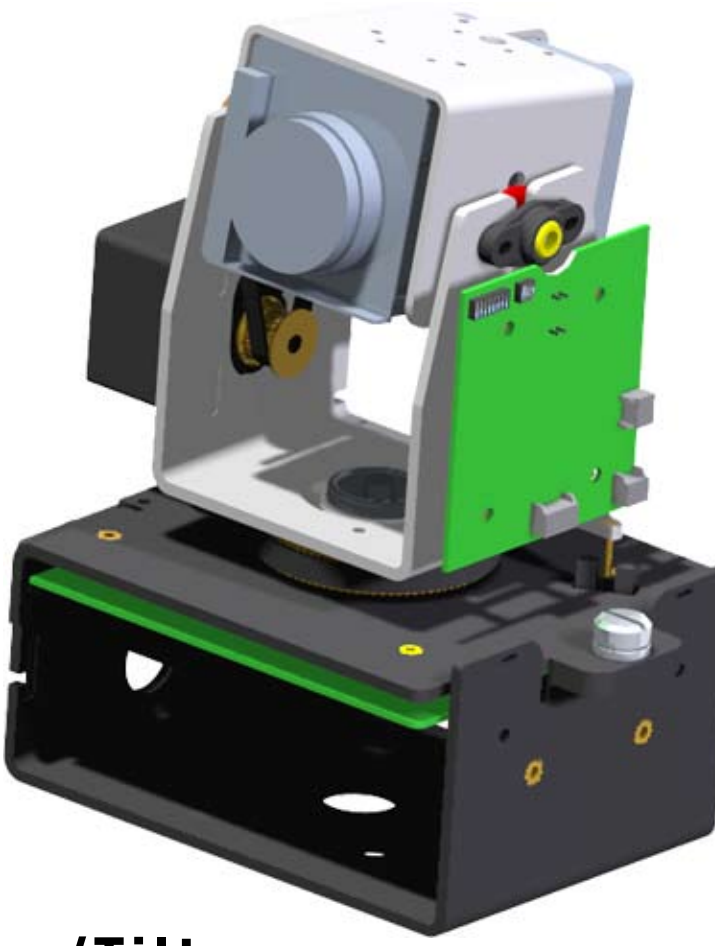

S-View Pan/Tilt

Analog and IP

www.videolarm.com

Installation and Operation Instructions for the following model:

ISO CERTIFIED

Before attempting to connect or operate this product,
please read these instructions completely.

81-IN5409
12-06-2010

IMPORTANT SAFEGUARDS

1 Read these instructions.

2 Keep these instructions.

3 Heed all warnings

4 Follow all instructions.

5 Do not use this apparatus near water.

6 Clean only with damp cloth.

7 Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.

8 Cable Runs- All cable runs must be within permissible distance.

9 Mounting - This unit must be properly and securely mounted to a supporting structure capable of sustaining the weight of the unit.

Accordingly:

a. The installation should be made by a qualified installer.

b. The installation should be in compliance with local codes.

c. Care should be exercised to select suitable hardware to install the unit, taking into account both the composition of the mounting surface and the weight of the unit.

10 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

11 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

12 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

13 Only use attachment/ accessories specified by the manufacturer.

14 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

15 Unplug this apparatus during lighting storms or when unused for long periods of time.

16 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled of objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Be sure to periodically examine the unit and the supporting structure to make sure that the integrity of the installation is intact. Failure to comply with the foregoing could result in the unit separating from the support structure and falling, with resultant damages or injury to anyone or anything struck by the falling unit.

UNPACKING

Unpack carefully. Electronic components can be damaged if improperly handled or dropped. If an item appears to have been damaged in shipment, replace it properly in its carton and notify the shipper.

Be sure to save:

1 The shipping carton and packaging material. They are the safest material in which to make future shipments of the equipment.

2 These Installation and Operating Instructions.

SERVICE

If technical support or service is needed, contact us at the following number:

TECHNICAL SUPPORT
AVAILABLE 24 HOURS
1 - 800 - 554 -1124

SAFETY PRECAUTIONS

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER- SERVICE-ABLE PARTS INSIDE. REFER SEVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with an arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk to persons.

Este símbolo se piensa para alertar al usuario a la presencia del “voltaje peligroso no-aislado” dentro del recinto de los productos que puede ser un riesgo de choque eléctrico.

Ce symbole est prévu pour alerter l’utilisateur à la presence “de la tension dangereuse” non-isolée dans la clôture de produits qui peut être un risque de choc électrique.

Dieses Symbol soll den Benutzer zum Vorhandensein der nicht-Isolier “Gefährdungsspannung” innerhalb der Produkteinschließung alarmieren die eine Gefahr des elektrischen Schlages sein kann.

Este símbolo é pretendido alertar o usuário à presença “di tensão perigosa non-isolada” dentro do cerco dos produtos que pode ser um risco de choque elétrico.

Questo simbolo è inteso per avvertire l’utente alla presenza “di tensione pericolosa” non-isolata all’interno della recinzione dei prodotti che può essere un rischio di scossa elettrica.

The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Este símbolo del punto del exclamation se piensa para alertar al usuario a la presencia de instrucciones importantes en la literatura que acompaña la aplicación.

Ce symbole de point d’exclamation est prévu pour alerter l’utilisateur à la presence des instructions importantes dans la littérature accompagnant l’appareil.

Dieses Ausruf Punktsymbol soll den Benutzer zum Vorhandensein de wichtigen Anweisungen in der Literatur alarmieren, die das Gerät begleitet.

Este símbolo do ponto do exclamation é pretendido alertar o usuário à presença de instruções importantes na literatura que acompanha o dispositivo.

Questo simbolo del punto del exclamaton è inteso per avvertire l’utente alla presenza delle istruzioni importanti nella letteratura che accompagna l'apparecchio.

USA PRIDE

LIMITED WARRANTY FOR VIDEOLARM INC. PRODUCTS

VIDEOLARM INC. warrants this Product to be free from defects in material or workmanship, as follows:

PRODUCT CATEGORY	PARTS		LABOR	
All Enclosures and Electronics	Five (5) Years		Five (5) Years	
Pan/Tilts	Three (3) Years	**6 months if used in autoscan /tour operation	Three (3) Years	**6 months if used in autoscan /tour operation
Poles/PoleEvators	Three (3) Years		Three (3) Years	
Warrior/Q-View/I.R.Illuminators	Five (5) Years		Five (5) Years	
SView Series	Five (5) Years	**6 months if used in autoscan /tour operation	Five (5) Years	**6 months if used in autoscan /tour operation
Controllers	Five (5) Years		Five (5) Years	
Power Supplies	Five (5) Years		Five (5) Years	
Accessory Brackets	Five (5) Years		Five (5) Years	

During the labor warranty period, to repair the Product, Purchaser will either return the defective product, freight prepaid, or deliver it to Videolarm Inc. Decatur GA. The Product to be repaired is to be returned in either its original carton or a similar package affording an equal degree of protection with a RMA# (Return Materials Authorization number) displayed on the outer box or packing slip. To obtain a RMA# you must contact our Technical Support Team at 800.554.1124 extension 101. Videolarm will return the repaired Product freight prepaid to Purchaser. Videolarm is not obligated to provide Purchaser with a substitute unit during the warranty period or at any time. After the applicable warranty period, Purchaser must pay all labor and/or parts charges.

The limited warranty stated in these product instructions is subject to all of the following terms and conditions:

TERMS AND CONDITIONS

1. **NOTIFICATION OF CLAIMS: WARRANTY SERVICE:** If Purchaser believes that the Product is defective in material or workmanship, then written notice with an explanation of the claim shall be given promptly by Purchaser to Videolarm but all claims for warranty service must be made within the warranty period. If after investigation Videolarm determines that the reported problem was not covered by the warranty, Purchaser shall pay Videolarm for the cost of investigating the problem at its then prevailing per incident billable rate. No repair or replacement of any Product or part thereof shall extend the warranty period as to the entire Product. The specific warranty on the repaired part only shall be in effect for a period of ninety (90) days following the repair or replacement of that part or the remaining period of the Product parts warranty, whichever is greater.
2. **EXCLUSIVE REMEDY: ACCEPTANCE:** Purchaser's exclusive remedy and Videolarm's sole obligation is to supply (or pay for) all labor necessary to repair any Product found to be defective within the warranty period and to supply, at no extra charge, new or rebuilt replacements for defective parts.
3. **EXCEPTIONS TO LIMITED WARRANTY:** Videolarm shall have no liability or obligation to Purchaser with respect to any Product requiring service during the warranty period which is subjected to any of the following: abuse, improper use: negligence, accident, lightning damage or other acts of God (i.e., hurricanes, earthquakes), modification, failure of the end-user to follow the directions outlined in the product instructions, failure of the end-user to follow the maintenance procedures recommended by the International Security Industry Organization, written in product instructions, or recommended in the service manual for the Product. Furthermore, Videolarm shall have no liability where a schedule is specified for regular replacement or maintenance or cleaning of certain parts (based on usage) and the end-user has failed to follow such schedule; attempted repair by non-qualified personnel; operation of the Product outside of the published environmental and electrical parameters, or if such Product's original identification (trademark, serial number) markings have been defaced, altered, or removed. Videolarm excludes from warranty coverage Products sold AS IS and/or WITH ALL FAULTS and excludes used Products which have not been sold by Videolarm to the Purchaser. All software and accompanying documentation furnished with, or as part of the Product is furnished "AS IS" (i.e., without any warranty of any kind), except where expressly provided otherwise in any documentation or license agreement furnished with the Product.
4. **PROOF OF PURCHASE:** The Purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.

DISCLAIMER OF WARRANTY

EXCEPT FOR THE FOREGOING WARRANTIES, VIDEOLARM HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY AND/OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN SECTION 2-312(3) OF THE UNIFORM COMMERCIAL CODE AND/OR IN ANY OTHER COMPARABLE STATE STATUTE. VIDEOLARM HEREBY DISCLAIMS ANY REPRESENTATIONS OR WARRANTY THAT THE PRODUCT IS COMPATIBLE WITH ANY COMBINATION OF NON-VIDEOLARM PRODUCTS OR NON-VIDEOLARM RECOMMENDED PRODUCTS PURCHASER CHOOSES TO CONNECT TO PRODUCT.

LIMITATION OF LIABILITY

THE LIABILITY OF VIDEOLARM, IF ANY, AND PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WHATSOEVER, REGARDLESS OF THE LEGAL THEORY AND WHETHER ARISING IN TORT OR CONTRACT, SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT WITH RESPECT TO WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL VIDEOLARM BE LIABLE TO PURCHASER FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR

Electrical Specifications

S-VIEW PAN/ TILT

English

Class 2 Power Supply Only
MODELS: 24 VAC
S-view: Analog 13 WATTS
S-view: IP 28 WATTS

MODELS: 12VDC
S-view: Analog 13 WATTS
S-view: IP 20 WATTS

Español

Fuente De Alimentación De la Clase 2 Solamente.
MODELOS: 24 VAC
S-vista: Análogo 13 VATIOS
S-vista: IP 28 VATIOS

MODELOS: 12VDC
S-vista: Análogo 13 VATIOS
S-vista: IP 20 VATIOS.

Français

Alimentation D'Énergie De la Classe 2 Seulement
MODÈLES : 24 VCA
S-vue : Analogue 13 WATTS
S-vue : IP 28 WATTS

MODÈLES : 12VDC
S-vue : Analogue 13 WATTS
S-vue : IP 20 WATTS.

Deutsch

Nur Kategorie 2 Spg. Versorgungsteil
MODELLE: 24 VAC
S-Ansicht: Analog 13 WATT
S-Ansicht: IP 28 WATT

MODELLE: 12VDC
S-Ansicht: Analog 13 WATT
S-Ansicht: IP 20 WATT.

Portuguese

Fonte De Alimentação Da Classe 2 Somente
MODELOS: 24 VAC
S-vista: Análogo 13 WATTS
S-vista: IP 28 WATTS

MODELOS: 12VDC
S-vista: Análogo 13 WATTS
S-vista: IP 20 WATTS

Italiano

Gruppo di alimentazione Del Codice categoria 2 Soltanto
MODELLI: 24 VCA
S-vista: Analog 13 WATT
S-vista: IP 28 WATT

MODELLI: 12VDC
S-vista: Analog 13 WATT
S-vista: IP 20 WATT.

Content of Box

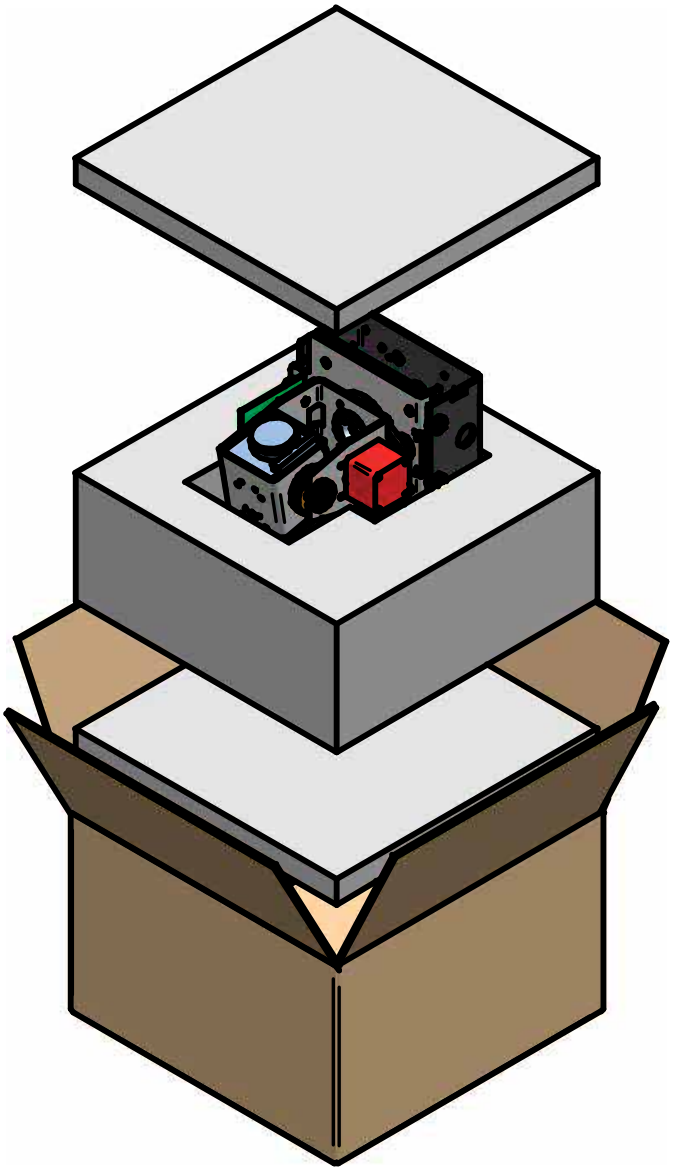

1

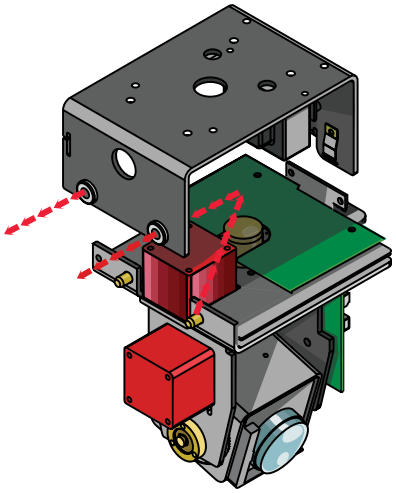

Remove Pan/Tilt from shipping carton. Install in base bracket in housing.

- Quite Pan/Tilt del cartón del envío. Instale en soporte bajo en la cubierta.
- Enlevez Pan/Tilt du carton d'expédition. Installez dans la parenthèse basse dans le logement.
- Entfernen Sie Pan/Tilt vom Verschiffenkarton. Bringen Sie in niedrigen Haltewinkel im Gehäuse an.
- Remova Pan/Tilt da caixa do transporte. Instale no suporte baixo na carcaça.
- Rimuova Pan/Tilt dalla scatola di trasporto. Installi in staffa bassa in alloggiamento.

2

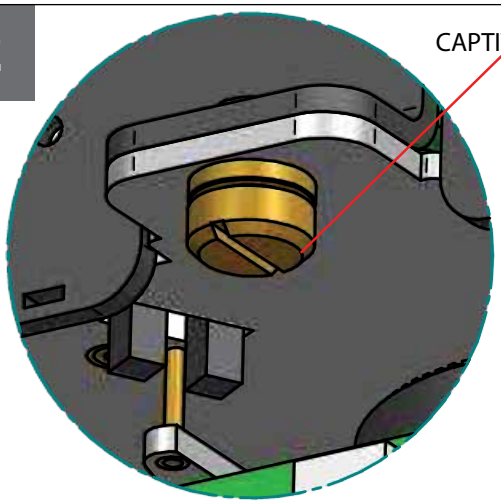

To secure in place, tighten captive screw.

- Para asegurar en lugar, apriete el tornillo prisionero.
- Pour fixer en place, serrez la vis captive.
- Um im Platz zu sichern, ziehen Sie Sicherheitsschraube fest.
- Para fixar-se no lugar, aperte o parafuso prisioneiro.
- Per fissare sul posto, stringa la vite prigioniera.

3

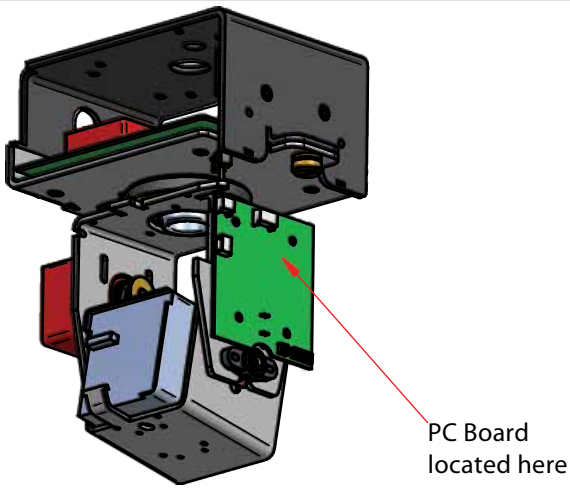

To set camera address locate PC board on the side of Pan/Tilt unit. (Analog)

- Para fijar la dirección de la cámara fotográfica localice el tablero de PC en el lado de la unidad de Pan/Tilt.
- Pour placer l'adresse d'appareil-photo localisez le panneau de PC du côté de l'unité de Pan/Tilt.
- Um Kameraadresse einzustellen lokalisieren Sie PC Brett auf der Seite der Pan/Tilt Maßeinheit.
- Para ajustar o endereço da câmera encontre a placa de PC no lado da unidade de Pan/Tilt.
- Per regolare l'indirizzo della macchina fotografica individui il bordo del pc dal lato dell'unità di Pan/Tilt.

4

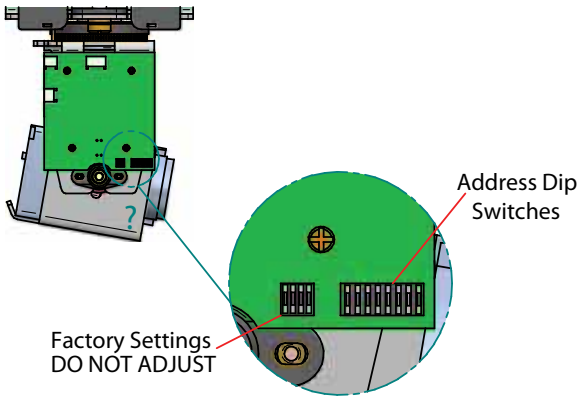

Use the 8 position Dip switch to set address lower corner. (Analog)

- Utilice el interruptor dip de 8 posiciones para fijar una esquina más baja de la dirección.
- Utilisez le contact DIP de 8 positions pour placer le coin inférieur d'adresse.
- Benutzen Sie den 8 Position DIP-Schalter, um Adresse unterere Ecke einzustellen.
- Use o interruptor de mergulho de 8 posições ajustar um canto mais baixo do endereço.
- Utilizzi l'interruttore di tuffo di 8 posizioni per regolare il angolo più basso di indirizzo.

5

(Analog)

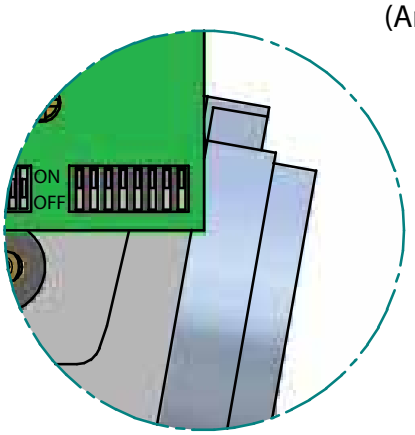

To set the address at “0” side the all switches off as shown. See table in back for address 0-255

- Para fijar la dirección en "0" lados todos los interruptores apagado según lo demostrado. Vea la tabla adentro detrás para la dirección 0-255
- Pour placer l'adresse sur "0" côtés les tous les commutateurs au loin comme montré. Voir le tableau dedans en arrière pour l'adresse 0-255
- Die Adresse an "0" Seite weg einstellen die alle Schalter, wie gezeigt. Sehen Sie Tabelle innen zurück für Adresse 0-255
- Para ajustar fora o endereço em "0" lados todos os interruptores como mostrado. Veja a tabela dentro para trás para o endereço 0-255
- Per regolare l'indirizzo "su 0" lati tutti gli interruttori fuori come indicato. Veda la tabella dentro indietro per l'indirizzo 0-255

6 PROTOCOLS

1	VL422
2	PELCO P 4800/9600
3	PELCO D 4800/9600

The S-View Pan/Tilt support the above protocols. This is done automatically no settings are required.

- La ayuda de la S-Vista Pan/Tilt los protocolos antedichos. Se requiere esto se hace automáticamente ningunos ajustes.
- L'appui de la S-Vue Pan/Tilt les protocoles ci-dessus. Ceci est fait automatiquement aucuns arrangements sont exigés.
- Die S-Ansicht Pan/Tilt Unterstützung die oben genannten Protokolle. Diesem wird automatisch keine Einstellungen werden angefordert getan.
- A sustentação da S-Vista Pan/Tilt os protocolos acima. Isto é feito automaticamente nenhuns ajustes é requerido.
- Il supporto di S-Vista Pan/Tilt i suddetti protocolli. Ciò è fatta automaticamente nessun regolazioni è richiesta.

7 MENU DRIVEN SETTINGS (Analog)

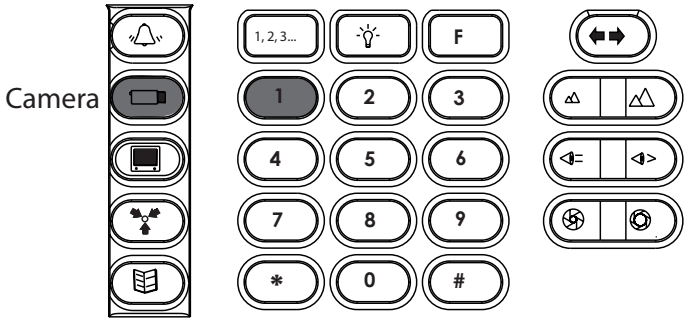

When using Videolarm controller; to enter the menu; select the camera you wish to control.

- Al usar el regulador de Videolarm; para incorporar el menú; seleccione la cámara fotográfica que usted desea controlar.
- En utilisant le contrôleur de Videolarm ; pour écrire le menu ; choisissez l'appareil-photo que vous souhaitez commander.
- Wenn Videolarm Steuerpult verwendet wird; das Menü eintragen; wählen Sie die Kamera vor, die Sie steuern möchten.
- Ao usar o controlador de Videolarm; para incorporar o menu; selecione a câmera que você deseja controlar.
- Nel usando il regolatore di Videolarm; per entrare nel menu; selezioni la macchina fotografica che desiderate controllare.

8 MENU DRIVEN SETTINGS (Analog)

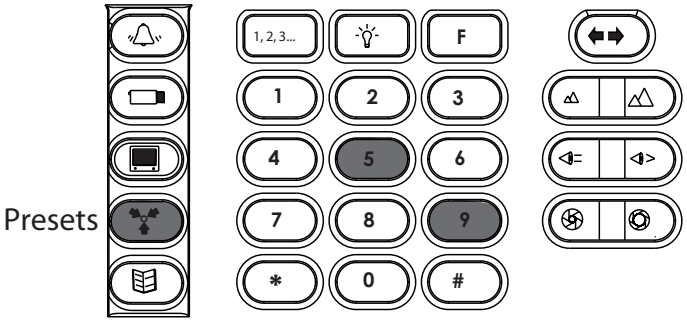

Then press 95 followed by the Preset button (🔧).

- Entonces la prensa 95 siguió por preestableció el botón (🔧).
- Alors la pression 95 a suivi de a préréglé le bouton (🔧).
- Dann folgte Presse 95 von einstellte Taste (🔧).
- Então a imprensa 95 seguiu pelo pré-ajustou a tecla (🔧).
- Allora la pressa 95 è seguito dal ha prestabilito il tasto (🔧).

9

(IP)

IP INSTRUCTIONS: The factory default IP address is : 192.168.0.90.

- INSTRUCCIONES DEL IP: El IP address del defecto de la fábrica es: 192.168.0.90.
- INSTRUCTIONS D'IP : Le IP address de défaut d'usine est : 192.168.0.90.
- IP ANWEISUNGEN: Das Fabrikrückstellung IP address ist: 192.168.0.90.
- INSTRUÇÕES DO IP: O IP address do defeito da fábrica é: 192.168.0.90.
- ISTRUZIONI DEL IP: Il IP address di difetto della fabbrica è: 192.168.0.90.

10

(IP)

Control interface for IP PTZ control

Control interface for IP PTZ control.

- Controle el interfaz para el control del IP PTZ.
- Commandez l'interface pour la commande d'IP PTZ.
- Steuern Sie Schnittstelle IP PTZ zur Steuerung.
- Controle a relação para o controle do IP PTZ.
- Controlli l'interfaccia per controllo del IP PTZ.

11

(IP)

To enter the setup menu, click on the “setup” icon

For Pan Tilt control click on the PTZ control icon in top right corner.

- Para el control de la inclinación de la cacerola chasque encendido el icono del control de PTZ en esquina derecha superior.
- Pour le clic de commande d'inclinaison de casserole sur l'icône de commande de PTZ dans le bon coin supérieur.
- Zur Wanne Neigungsteuerung klicken Sie an die PTZ Steuerikone in der Rechteecke.
- Para o controle da inclinação da bandeja estale sobre o ícone do controle de PTZ no canto direito superior.
- Per controllo di ribaltamento della vaschetta scatti sopra l'icona di controllo di PTZ nel giusto angolo superiore.

12

(IP)

See IP Camera instruction CD for operation details.

- Vea el CD de la instrucción de la cámara fotográfica del IP para los detalles de la operación.
- Voir le CD d'instruction d'appareil-photo d'IP pour des détails d'opération.
- Sehen Sie IP Kamera-Anweisung CD für Betrieb Details.
- Veja o CD da instrução da câmera do IP para detalhes da operação.
- Veda il CD di istruzione della macchina fotografica del IP per i particolari di funzionamento.

13 DISPLAY / MENU

Use Up & Down control on the controller to navigate through the menu. Pan left and right are used to enter sub menus.

- Utilice para arriba y abajo controle en el regulador para navegar a través del menú. La cacerola a la izquierda e a la derecha se utiliza para incorporar menús secundarios.
- Épuisez et commandez vers le bas sur le contrôleur pour diriger par le menu. La casserole à gauche et à droite sont utilisées pour écrire les menus secondaires.
- Verwenden Sie oben u. steuern Sie unten auf dem Steuerpult, um durch das Menü zu steuern. Verschieben Sie links und recht werden verwendet, Vormenüs einzutragen.
- Use acima & controle para baixo no controlador para navigate através do menu. Garimpe esquerdo e direito são usados incorporar menus secundários.
- Consumi & giù controlli sul regolatore per traversare attraverso il menu. La vaschetta a destra e a sinistra è utilizzata per entrare nei menu secondari..

14 DISPLAY / COMPASS

Use this submenu to activate compass heading. Press zoom in to turn on, zoom out to turn off, Pan Left to exit.

- Utilice este submenu para activar el título de compás. Presione el zumbido adentro para girarse, zumbido hacia fuera a dan vuelta apagado, cacerola izquierda a la salida.
- Employez ce submenu pour activer le titre de boussole. Serrez le bourdonnement dedans pour se tourner dessus, bourdonnement dehors vers se tournent au loin, casserole gauche vers la sortie.
- Verwenden Sie dieses submenu, um Kompaßsteuerkurs zu aktivieren. Betätigen Sie Zoom innen, um, Zoom heraus an an zu wenden wenden weg, die Wanne, die an Ausgang link ist.
- Use este submenu ativar o título de compasso. Pressione o zumbido dentro para girar sobre, zumbido para fora para desligam, bandeja esquerda para a saída.
- Usi questo submenu per attivare l'intestazione di bussola. Premi lo zoom dentro per girarsi sopra, zoom fuori verso si girano fuori, vaschetta di sinistra verso l'uscita.

15 DISPLAY / SET NORTH

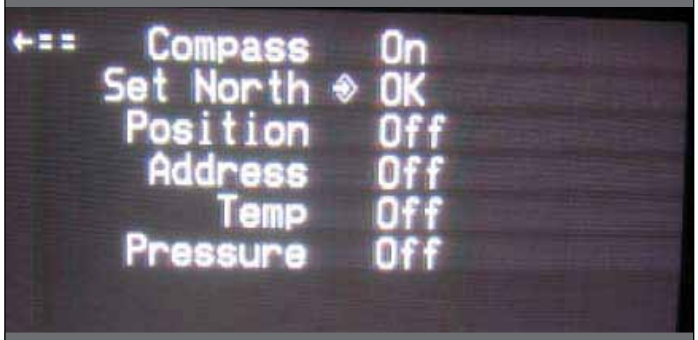

Use the “Zoom In” botton to set calibration. Display will show OK.

- Utilice el "zumbido en" botton para fijar la calibración. La exhibición demostrará MUY BIEN.
- Employez l'"bourdonnement dans" le botton pour placer le calibrage. L'affichage montrera BIEN.
- Benutzen Sie den "Zoom" im botton, um Kalibrierung einzustellen. Anzeige stellt O.K. dar.
- Use o "zumbido" no botton ajustar a calibração. A exposição mostrará ESTÁ BEM.
- Usi "lo zoom" nel botton per regolare la calibratura. L'esposizione mostrerà BENE.

16 DISPLAY / POSITION

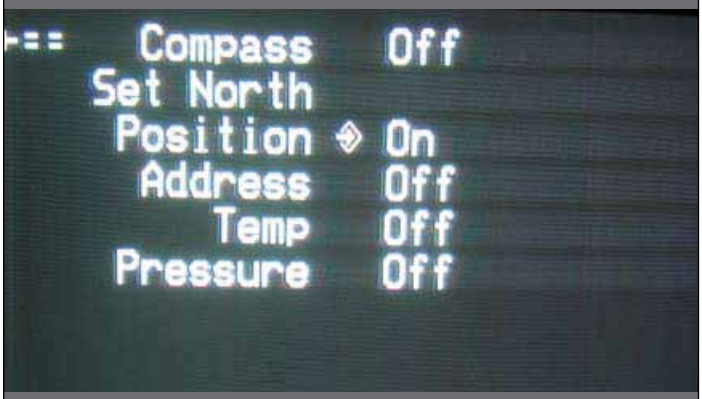

A numeric camera position is shown on monitor. With “Position” activated.

- Una posición numérica de la cámara fotográfica se demuestra respecto a monitor. Con la "Posición" activó.
- Une position numérique d'appareil-photo est montrée sur le moniteur. Avec l'"Position" a activé.
- Eine numerische Kameraposition wird auf Monitor gezeigt. Wenn "Position" aktiviert ist.
- Uma posição numérica da câmera é mostrada no monitor. Com "Posição" ativou.
- Una posizione numerica della macchina fotografica è indicata sul video. Con "Posizione" ha attivato.

17 DISPLAY / ADDRESS

When activated this will display camera's address on the monitor.

- Cuando está activado esto exhibirá la dirección de la cámara fotográfica en el monitor.
- Quand activé ceci montrera l'adresse de l'appareil-photo sur le moniteur.
- Wenn Sie diesem aktiviert werden, zeigt Adresse der Kamera auf dem Monitor an.
- Quando ativado isto indicará o endereço da câmera no monitor.
- Una volta attivato questo visualizzerà l'indirizzo della macchina fotografica sul video.

18 DISPLAY / TEMP.

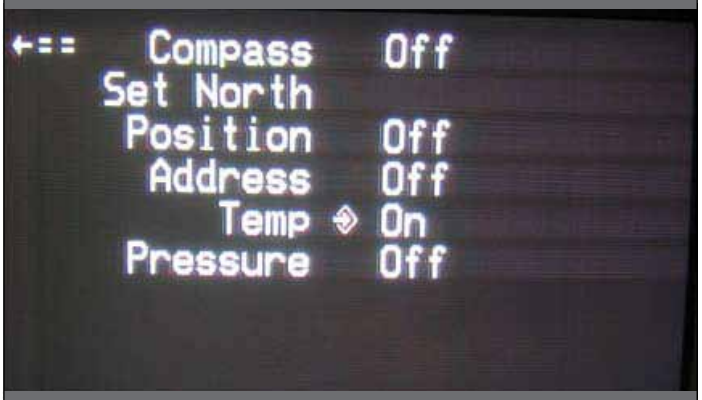

Will display temperature data from Pan/Tilt on monitor.

- Exhibirá datos de la temperatura de Pan/Tilt en monitor.
- Montrera des données de la température de Pan/Tilt sur le moniteur.
- Zeigt Temperaturdaten von Pan/Tilt auf Monitor an.
- Indicará dados da temperatura de Pan/Tilt no monitor.
- Visualizzerà i dati di temperatura da Pan/Tilt sul video.

19 DISPLAY / PRESSURE

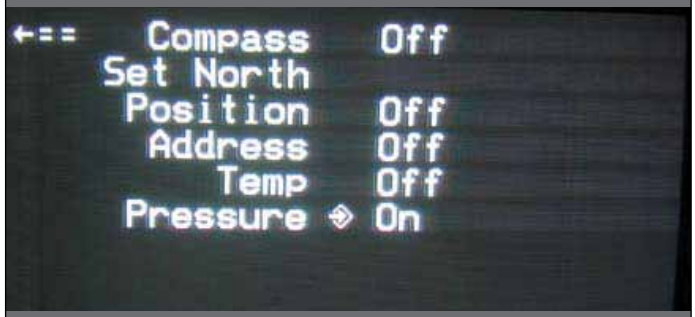

Will display pressure data from Pan/Tilt on monitor. This feature is only available on select models.

- Exhibirá datos de la presión de Pan/Tilt en monitor. Esta característica está solamente disponible en modelos selectos.
- Montrera des données de pression de Pan/Tilt sur le moniteur. Ce dispositif est seulement disponible sur les modèles choisis.
- Zeigt Druckdaten von Pan/Tilt auf Monitor an. Diese Eigenschaft ist auf auserwählten Modellen nur vorhanden.
- Indicará dados da pressão de Pan/Tilt no monitor. Esta característica está somente disponível em modelos seletos.
- Visualizzerà i dati di pressione da Pan/Tilt sul video. Questa caratteristica è soltanto disponibile sui modelli prescelti.

20 CAMERA / MENU

Use camera menu to activate selected camera features.

- Utilice el menú de la cámara fotográfica para activar características seleccionadas de la cámara fotográfica.
- Employez le menu d'appareil-photo pour activer les dispositifs choisis d'appareil-photo.
- Benutzen Sie Kameramenü, um vorgewählte Kameraeigenschaften zu aktivieren.
- Use o menu da câmera ativar características selecionadas da câmera.
- Usi il menu della macchina fotografica per attivare le caratteristiche selezionate della macchina fotografica.

21 CAMERA / STABILIZATION

Camera sub menu includes, image stabilization, day/night mode, shutter, backlight, AGC and digital zoom. Image stabilization is not a feature of all cameras.

- El menú secundario de la cámara fotográfica incluye, estabilización de la imagen, modo de day/night, obturador, contraluz, AGC y zumbido digital. La estabilización de la imagen no es una característica de todas las cámaras fotográficas.
- Le menu secondaire d'appareil-photo inclut, stabilisation d'image, mode de day/night, obturateur, contre-jour, AGC et bourdonnement numérique. La stabilisation d'image n'est pas un dispositif de tous les appareils-photo.
- Kameravormenü schließt, Bildausgleichung, day/night Modus, Blendenverschluß, Hintergrundbeleuchtung, AGC und digitaler Zoom ein. Bildausgleichung ist nicht eine Eigenschaft aller Kameras.
- O menu secundário da câmera inclui, estabilização da imagem, modalidade de day/night, obturador, luminoso, AGC e zumbido digital. A estabilização da imagem não é uma característica de todas as câmeras.
- Il menu secondario della macchina fotografica include, stabilizzazione di immagine, modo di day/night, otturatore, lampadina, AGC e zoom digitale. La stabilizzazione di immagine non è una caratteristica di tutte le macchine fotografiche.

22 ALARM / MENU

Use sub menu to activate alarm. When enabled camera will go to preset “1” when alarm input is closed.

- Utilice el menú secundario para activar el alarmar. Cuando está permitida la cámara fotográfica irá a preestablecer "1" cuando la entrada del alarmar es cerrada.
- Employez le menu secondaire pour activer l'alarme. Quand permis l'appareil-photo ira prérégler "1" quand l'entrée d'alarme est fermée.
- Benutzen Sie Vormenü, um Warnung zu aktivieren. Wenn sie ermöglicht wird, geht Kamera, "1" einzustellen, wenn Warnung Eingang geschlossen ist.
- Use o menu secundário ativar o alarme. Quando permitida a câmera irá pré-ajustar "1" quando a entrada do alarme é closed.
- Usi il menu secondario per attivare l'allarme. Una volta permessa la macchina fotografica andrà prestabilire "1" quando l'input dell'allarme è chiuso.

23 ZONE / SHOW

Will show title of the zone on monitor when activated.

- Demostrará el título de la zona en monitor cuando está activado.
- Montrera le titre de la zone sur le moniteur quand activé.
- Zeigt Titel der Zone auf Monitor, wenn Sie aktiviert werden.
- Mostrará o título da zona no monitor quando ativado.
- Mostrerà il titolo della zona sul video una volta attivato.

24 ZONE / PRIV.

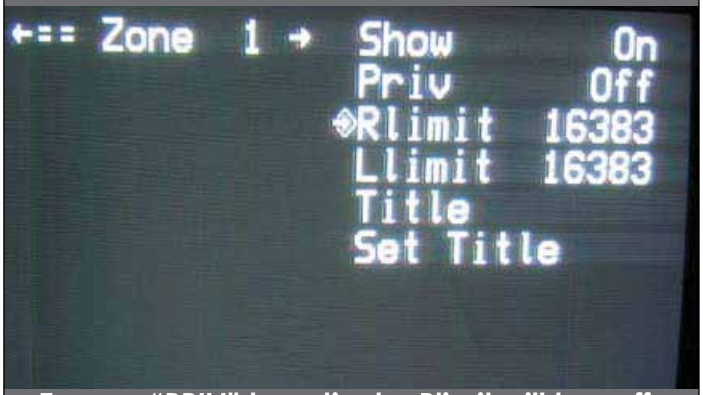

Turn on “PRIV” to activate; Rlimit will turn off menu, to allow you to position right limit for zone.

- Gire "PRIV" para activar; el rlimit dará vuelta apagado al menú, para permitir que usted coloque el límite derecho para la zona.
- Allumez "PRIV" pour activer ; le rlimit arrêtera le menu, pour vous permettre de placer la bonne limite pour la zone.
- Schalten Sie "PRIV" ein, um zu aktivieren; rlimit stellt Menü ab, um Ihnen zu erlauben, rechte Begrenzung für Zone in Position zu bringen.
- Gire sobre "PRIV" para ativar; o rlimit desligará o menu, para permitir que você posicione o limite direito para a zona.
- Accenda "PRIV" per attivare; il rlimit spegnerà il menu, per permettere che posizioniate il giusto limite per la zona.

25 ZONE / LLIMIT

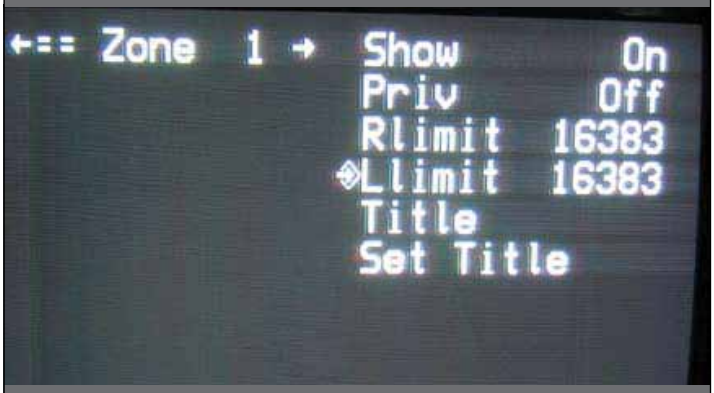

Llimit will “turn off” menu and allow you to position camera for left limit of zone.

- Voluntad de Llimit "dar vuelta apagado" al menú y permitir que usted coloque la cámara fotográfica para el límite izquierdo de la zona.
- Volonté de Llimit "arrêter" le menu et vous permettre de placer l'appareil-photo pour la limite gauche de la zone.
- Llimit Wille Menü "" abstellen und Ihnen erlauben, Kamera für linke Begrenzung auf Zone in Position zu bringen.
- Vontade de Llimit "para desligar" o menu e para permitir que você posicione a câmera para o limite esquerdo da zona.
- Volontà di Llimit "spegnere" menu e permettere che posizioniate macchina fotografica per il limite di sinistra della zona.

26 ZONE / TITLE

Shows on menu screen title characters selected.

- Demostraciones en los caracteres del título de la pantalla de menú seleccionados.
- Expositions sur des caractères de titre d'écran menu choisis.
- Erscheinen auf den Menüschirm-Titelbuchstaben vorgewählt.
- As mostras em caráteres do título da tela de menu selecionaram.
- Le esposizioni sui caratteri di titolo dello schermo di menu hanno selezionato.

27 ZONE / SET TITLE

Allow you to select title characters. Pan left or right to change character position. Use tilt up/down to show characters. Press zoom in to set title-exit menu zoom out will restore to original title.

- Permita que usted seleccione caracteres del título. Filtre izquierdo o derecho cambiar la posición de carácter. Utilice la inclinación up/down para demostrar caracteres. El zumbido de la prensa adentro para fijar el zumbido del menú de la ti'tulo-salida hacia fuera restaurará al título original.
- Permettez-vous de choisir des caractères de titre. Filtrez gauche ou droit de changer la position d'impression. Employez l'inclinaison haut/bas pour montrer des caractères. Le bourdonnement de pression dedans pour placer le bourdonnement de menu de titre-sortie dehors reconstituera au titre original.
- Erlauben Sie Ihnen, Titelbuchstaben vorzuwählen. Verschieben Sie links oder recht, Zeichenstelle zu ändern. Verwenden Sie die Neigung, die, um Buchstaben zu zeigen Auf-/Ab ist. Der Presse Zoom innen, zum von von Titel-Ausgang Menü Zoom heraus einzustellen stellt zum ursprünglichen Titel wieder her.
- Permita que você selecione caráteres do título. Garimpe esquerdo ou direito para mudar a posição de caráter. Use a inclinação up/down mostrar caráteres. O zumbido da imprensa dentro para ajustar o zumbido do menu da título-saída para fora restaurará ao título original.
- Permetta che selezioniate i caratteri di titolo. Filtri di sinistra o di destra per cambiare la posizione del carattere. Usi l'inclinazione up/down per mostrare i caratteri. Lo zoom della pressa dentro per regolare lo zoom del menu dell'titolo-uscita fuori ristabilirà al titolo originale.

28 SYSTEM INFO

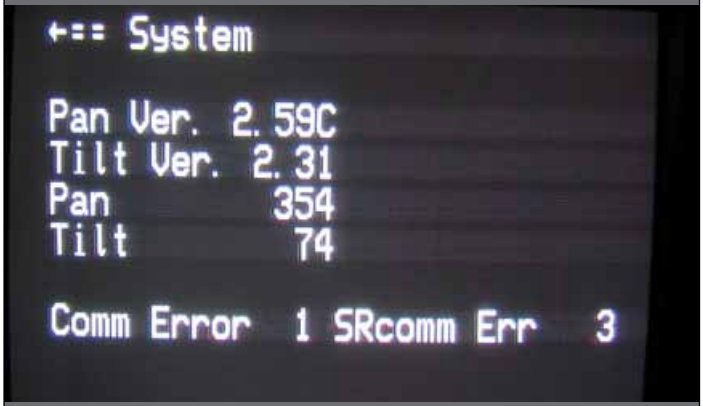

Displays Pan version, Tilt version, current Pan position, and current Tilt position.

- Versión de la cacerola de las exhibiciones, versión de la inclinación, posición actual de la cacerola, y posición actual de la inclinación.
- Version de casserole d'affichages, version d'inclinaison, position actuelle de casserole, et position actuelle d'inclinaison.
- Anzeigen Wanne Version, Neigungversion, gegenwärtige Wanne Position und gegenwärtige Neigungposition.
- Versão da bandeja das exposições, versão da inclinação, posição atual da bandeja, e posição atual da inclinação.
- Versione della vaschetta delle esposizioni, versione di inclinazione, attuale posizione della vaschetta ed attuale posizione di inclinazione.

29 PRESETS

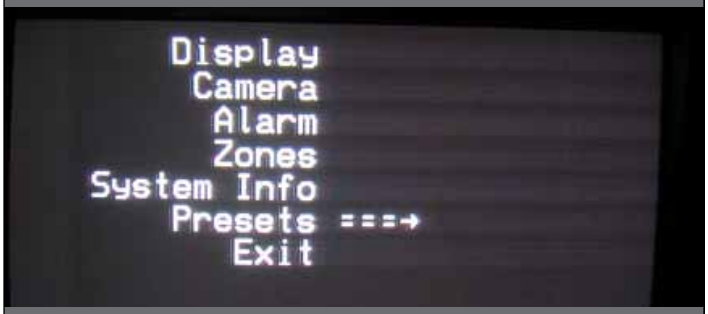

Allow user to set dwell time for each stored preset. If presets have not been saved the dwell time for that preset will be displayed as "".

- Permita que el usuario fije el tiempo de detención para cada uno almacenada preestablecen. Si las precolocaciones no se han ahorrado la época de detención para ese preestablezca será exhibido como "".
- Permettez à l'utilisateur de placer le temps d'angle de saturation pour chacun stocké prérèglent. Si des préréglages que le démuni économisé le moment d'angle de saturation pour le ce a préréglés seront montrés comme "".
- Erlauben Sie Benutzer, Verweilzeit für gespeichertes jedes einzustellen einstellen. Wenn Voreinstellungen nicht die Verweilzeit für dieses gespeichert worden sind, stellen Sie wird angezeigt wie "" ein.
- Permita que o usuário ajuste o tempo de interrupção para cada um armazenado pré-ajustam. Se os pré-ajustes não forem conservados o momento de interrupção para o esse pré-ajuste estará indicado como "".
- Permetta che l'utente regoli il tempo di abitazione per ciascuno immagazzinato prestabiliscono. Se i preregolamenti non sono stati conservati il momento di abitazione per il quel prestabilisca sarà visualizzato come "".

30 PRESETS

Allows user to set dwell time for each existing stored preset. The above screen show (6) stored presets, with dwell times of, 9,5,12,5,5,5 seconds.

- Permite que el usuario fije el tiempo de detención para que cada uno el existir almacenado preestableció. Las precolocaciones almacenadas (6) antedicho de la demostración de la pantalla, con tiempos de detención de, 9.5.12.5.5.5 segundos.
- Permet à l'utilisateur de placer le temps d'angle de saturation pour que chacun exister stocké a préréglé. Les préréglages stockés par (6) ci-dessus d'exposition d'écran, avec des temps d'angle de saturation de, 9.5.12.5.5.5 secondes.
- Erlaubt Benutzer, Verweilzeit für jedes einzustellen, stellte das Bestehen gespeichert ein. Die oben genanntes gespeicherten Voreinstellungen des Schirmerscheinens (6), mit Verweilzeiten von, 9.5.12.5.5.5 Sekunden.
- Permite que o usuário ajuste o tempo de interrupção para que cada um existir armazenado pré-ajustou. Os pré-ajustes armazenados da mostra da tela (6) acima, com tempos de interrupção de, 9.5.12.5.5.5 segundos.
- Permette che l'utente regoli il tempo di abitazione per ciascuno esistere memorizzato ha prestabilito. Suddetto i preregolamenti che immagazzinati di esposizione dello schermo (6), con i tempi di abitazione di, 9.5.12.5.5.5 secondi.

31 MENU DRIVEN SETTINGS

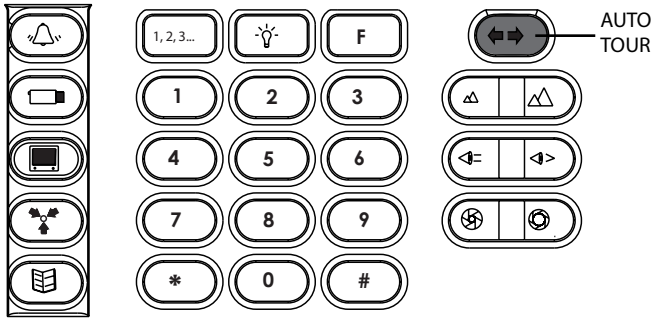

To activate a Tour of Preset press Auto Tour Button(⇐⇒) on controller after exiting menu.

- Para activar un viaje de preestablezca el viaje auto Button (⇐⇒) de la prensa en regulador después de salir del menú.
- Pour activer une excursion de préréglez l'excursion automatique Button(⇐⇒) on d'excursion de pression après avoir sorti le menu.
- Um eine Tour von zu aktivieren stellen Sie Presse Selbsttour Button(⇐⇒) on Steuerpult ein nachdem Sie Menü herausgenommen haben.
- Para ativar uma excursão de pré-ajuste a auto excursão Button(⇐⇒) on da excursão da imprensa o auto após ter retirado o menu.
- Per attivare un giro di prestabilisca il giro auto Button(⇐⇒) on di giro della pressa dopo avere rimosso il menu.

32 EXIT

Select exit to leave menu options.

- Seleccione la salida para dejar opciones del menú.
- Choisissez la sortie pour laisser des options de menu.
- Wählen Sie Ausgang vor, um Menüwahlen zu lassen.
- Selecione a saída para deixar opções do menu.
- Selezioni l'uscita per lasciare le opzioni del menu.

33

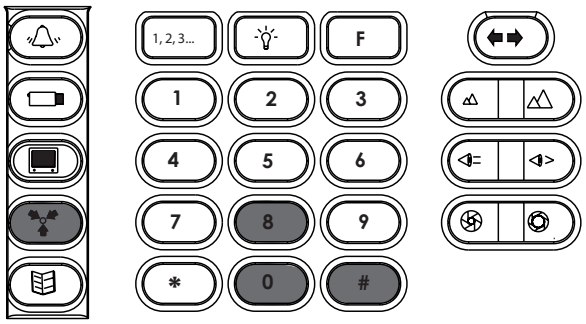

To set a manually controlled pattern by joystick set Preset 80 (80,#,).

- Para fijar un patrón manualmente controlado por el sistema de la palanca de mando preestablezca 80 (80, #,).
- Pour placer un modèle manuellement commandé par l'ensemble de manche préréglez 80 (80, #,).
- Um ein manuell gesteuertes Muster durch Steuerknüppelsatz einzustellen stellen Sie 80 ein (80, #,).
- Para ajustar um teste padrão manualmente controlado pelo jogo do manche pré-ajuste 80 (80, #,).
- Per determinare un modello manualmente controllato dall'insieme della barra di comando prestabilisca 80 (80, #,).

34

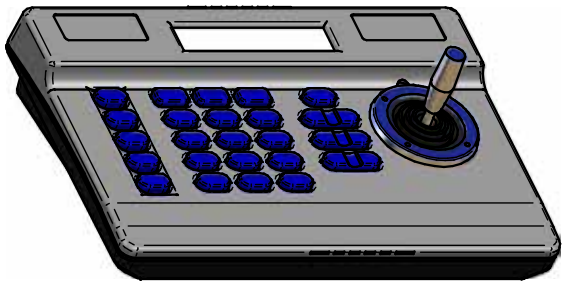

Using the joystick move Pan/Tilt to desired positions where you can record up to 128 seconds of movement.

- Con la palanca de mando mueva Pan/Tilt a las posiciones deseadas donde usted puede registrar hasta 128 segundos de movimiento.
- En utilisant le manche déplacez Pan/Tilt aux positions désirées où vous pouvez enregistrer jusqu'à 128 secondes de mouvement.
- Mit dem Steuerknüppel verschieben Sie Pan/Tilt auf gewünschte Positionen, in denen Sie bis 128 Sekunden Bewegung notieren können.
- Usando o manche mova Pan/Tilt para as posições desejadas onde você pode gravar até 128 segundos do movimento.
- Per mezzo della barra di comando sposti Pan/Tilt verso le posizioni volute dove potete registrare fino a 128 secondi di movimento.

35

Presets

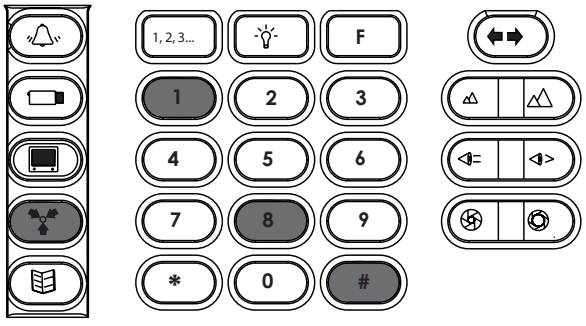

Press Preset 81 to stop recording (81,#,). Preset 80, to start pattern.

- Presione preestablecen 81 para parar el registrar (81, #,). Preestablezca 80, para comenzar el patrón.
- Serrez prérèglent 81 pour cesser d'enregistrer (81, #,). Préréglez 80, pour commencer le modèle.
- Betätigen Sie sich einstellen 81, um zu notieren zu stoppen (81, #,). Stellen Sie 80 ein, um Muster zu beginnen.
- Pressione pré-ajustam 81 para parar de gravar (81, #,). Pré-ajuste 80, para começar o teste padrão.
- Premi prestabiliscono 81 per smettere di registrare (81, #,). Prestabilisca 80, per iniziare il modello.

36

OTHER FEATURES:

Home Preset

Preset 1 is the "home preset". If this preset has been defined, then the VLTP385 will always go to this preset when the unit is powered up.

Remote Address

The Address of the unit can be set by a remote command. This "soft" address will be saved even if the unit loses power and will override the dip switch set address. The "soft" address can be cleared by a remote command and the address will be determined by the dip switch setting.

Program Download

There are two software programs in the standard unit. Each program can be updated via the command communication channel with a laptop or other computer system.

Error Messages

The "COMM ERROR" message will be displayed at the top of the screen whenever the MR7CS-9™ detects frame errors in the receive data, such as when the RXA and RXB wires are reversed when using RS485/422 or when the baud rate is incorrect.

The CAMERA ERROR" message will be displayed at the top of the screen whenever there is an error in communication with the camera.

Table 1: Pan/Tilt Address Dip Switch Settings

ADDRESS	SW8	SW7	SW6	SW5	SW4	SW3	SW2	SW1
0	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON
2	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
3	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON
4	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
5	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON
6	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
7	OFF	OFF	OFF	OFF	OFF	ON	ON	ON
8	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
9	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
10	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
11	OFF	OFF	OFF	OFF	ON	OFF	ON	ON
12	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
13	OFF	OFF	OFF	OFF	ON	ON	OFF	ON
14	OFF	OFF	OFF	OFF	ON	ON	ON	OFF
15	OFF	OFF	OFF	OFF	ON	ON	ON	ON
16	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
17	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
18	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
19	OFF	OFF	OFF	ON	OFF	OFF	ON	ON
20	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
21	OFF	OFF	OFF	ON	OFF	ON	OFF	ON
22	OFF	OFF	OFF	ON	OFF	ON	ON	OFF
23	OFF	OFF	OFF	ON	OFF	ON	ON	ON
24	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
25	OFF	OFF	OFF	ON	ON	OFF	OFF	ON
26	OFF	OFF	OFF	ON	ON	OFF	ON	OFF
27	OFF	OFF	OFF	ON	ON	OFF	ON	ON
28	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
29	OFF	OFF	OFF	ON	ON	ON	OFF	ON
30	OFF	OFF	OFF	ON	ON	ON	ON	OFF
31	OFF	OFF	OFF	ON	ON	ON	ON	ON
32	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
33	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON
34	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
35	OFF	OFF	ON	OFF	OFF	OFF	ON	ON
36	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF
37	OFF	OFF	ON	OFF	OFF	ON	OFF	ON
38	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
39	OFF	OFF	ON	OFF	OFF	ON	ON	ON
40	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
41	OFF	OFF	ON	OFF	ON	OFF	OFF	ON
42	OFF	OFF	ON	OFF	ON	OFF	ON	OFF
43	OFF	OFF	ON	OFF	ON	OFF	ON	ON
44	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
45	OFF	OFF	ON	OFF	ON	ON	OFF	ON
46	OFF	OFF	ON	OFF	ON	ON	ON	OFF
47	OFF	OFF	ON	OFF	ON	ON	ON	ON
48	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
49	OFF	OFF	ON	ON	OFF	OFF	OFF	ON
50	OFF	OFF	ON	ON	OFF	OFF	ON	OFF
51	OFF	OFF	ON	ON	OFF	OFF	ON	ON
52	OFF	OFF	ON	ON	OFF	ON	OFF	OFF
53	OFF	OFF	ON	ON	OFF	ON	OFF	ON
54	OFF	OFF	ON	ON	OFF	ON	ON	OFF
55	OFF	OFF	ON	ON	OFF	ON	ON	ON
56	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
57	OFF	OFF	ON	ON	ON	OFF	OFF	ON
58	OFF	OFF	ON	ON	ON	OFF	ON	OFF
59	OFF	OFF	ON	ON	ON	OFF	ON	ON
60	OFF	OFF	ON	ON	ON	ON	OFF	OFF
61	OFF	OFF	ON	ON	ON	ON	OFF	ON
62	OFF	OFF	ON	ON	ON	ON	ON	OFF
63	OFF	OFF	ON	ON	ON	ON	ON	ON
64	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
65	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON
66	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF
67	OFF	ON	OFF	OFF	OFF	OFF	ON	ON
68	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
69	OFF	ON	OFF	OFF	OFF	ON	OFF	ON
70	OFF	ON	OFF	OFF	OFF	ON	ON	OFF
71	OFF	ON	OFF	OFF	OFF	ON	ON	ON
72	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
73	OFF	ON	OFF	OFF	ON	OFF	OFF	ON
74	OFF	ON	OFF	OFF	ON	OFF	ON	OFF
75	OFF	ON	OFF	OFF	ON	OFF	ON	ON
76	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
77	OFF	ON	OFF	OFF	ON	ON	OFF	ON
78	OFF	ON	OFF	OFF	ON	ON	ON	OFF
79	OFF	ON	OFF	OFF	ON	ON	ON	ON
80	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
81	OFF	ON	OFF	ON	OFF	OFF	OFF	ON
82	OFF	ON	OFF	ON	OFF	OFF	ON	OFF
83	OFF	ON	OFF	ON	OFF	OFF	ON	ON
84	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
85	OFF	ON	OFF	ON	OFF	ON	OFF	ON
86	OFF	ON	OFF	ON	OFF	ON	ON	OFF
87	OFF	ON	OFF	ON	OFF	ON	ON	ON
88	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
89	OFF	ON	OFF	ON	ON	OFF	OFF	ON

ADDRESS	SW8	SW7	SW6	SW5	SW4	SW3	SW2	SW1
90	OFF	ON	OFF	ON	ON	OFF	ON	OFF
91	OFF	ON	OFF	ON	ON	OFF	ON	ON
92	OFF	ON	OFF	ON	ON	ON	OFF	OFF
93	OFF	ON	OFF	ON	ON	ON	OFF	ON
94	OFF	ON	OFF	ON	ON	ON	ON	OFF
95	OFF	ON	OFF	ON	ON	ON	ON	ON
96	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
97	OFF	ON	ON	OFF	OFF	OFF	OFF	ON
98	OFF	ON	ON	OFF	OFF	OFF	ON	OFF
99	OFF	ON	ON	OFF	OFF	OFF	ON	ON
100	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
101	OFF	ON	ON	OFF	OFF	ON	OFF	ON
102	OFF	ON	ON	OFF	OFF	ON	ON	OFF
103	OFF	ON	ON	OFF	OFF	ON	ON	ON
104	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
105	OFF	ON	ON	OFF	ON	OFF	OFF	ON
106	OFF	ON	ON	OFF	ON	OFF	ON	OFF
107	OFF	ON	ON	OFF	ON	OFF	ON	ON
108	OFF	ON	ON	OFF	ON	ON	OFF	OFF
109	OFF	ON	ON	OFF	ON	ON	OFF	ON
110	OFF	ON	ON	OFF	ON	ON	ON	OFF
111	OFF	ON	ON	OFF	ON	ON	ON	ON
112	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
113	OFF	ON	ON	ON	OFF	OFF	OFF	ON
114	OFF	ON	ON	ON	OFF	OFF	ON	OFF
115	OFF	ON	ON	ON	OFF	OFF	ON	ON
116	OFF	ON	ON	ON	OFF	ON	OFF	OFF
117	OFF	ON	ON	ON	OFF	ON	OFF	ON
118	OFF	ON	ON	ON	OFF	ON	ON	OFF
119	OFF	ON	ON	ON	OFF	ON	ON	ON
120	OFF	ON	ON	ON	ON	OFF	OFF	OFF
121	OFF	ON	ON	ON	ON	OFF	OFF	ON
122	OFF	ON	ON	ON	ON	OFF	ON	OFF
123	OFF	ON	ON	ON	ON	OFF	ON	ON
124	OFF	ON	ON	ON	ON	ON	OFF	OFF
125	OFF	ON	ON	ON	ON	ON	OFF	ON
126	OFF	ON	ON	ON	ON	ON	ON	OFF
127	OFF	ON	ON	ON	ON	ON	ON	ON
128	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
129	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON
130	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF
131	ON	OFF	OFF	OFF	OFF	OFF	ON	ON
132	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
133	ON	OFF	OFF	OFF	OFF	ON	OFF	ON
134	ON	OFF	OFF	OFF	OFF	ON	ON	OFF

ADDRESS	SW8	SW7	SW6	SW5	SW4	SW3	SW2	SW1
135	ON	OFF	OFF	OFF	OFF	ON	ON	ON
136	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
137	ON	OFF	OFF	OFF	ON	OFF	OFF	ON
138	ON	OFF	OFF	OFF	ON	OFF	ON	OFF
139	ON	OFF	OFF	OFF	ON	OFF	ON	ON
140	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
141	ON	OFF	OFF	OFF	ON	ON	OFF	ON
142	ON	OFF	OFF	OFF	ON	ON	ON	OFF
143	ON	OFF	OFF	OFF	ON	ON	ON	ON
144	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
145	ON	OFF	OFF	ON	OFF	OFF	OFF	ON
146	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
147	ON	OFF	OFF	ON	OFF	OFF	ON	ON
148	ON	OFF	OFF	ON	OFF	ON	OFF	OFF
149	ON	OFF	OFF	ON	OFF	ON	OFF	ON
150	ON	OFF	OFF	ON	OFF	ON	ON	OFF
151	ON	OFF	OFF	ON	OFF	ON	ON	ON
152	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
153	ON	OFF	OFF	ON	ON	OFF	OFF	ON
154	ON	OFF	OFF	ON	ON	OFF	ON	OFF
155	ON	OFF	OFF	ON	ON	OFF	ON	ON
156	ON	OFF	OFF	ON	ON	ON	OFF	OFF
157	ON	OFF	OFF	ON	ON	ON	OFF	ON
158	ON	OFF	OFF	ON	ON	ON	ON	OFF
159	ON	OFF	OFF	ON	ON	ON	ON	ON
160	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
161	ON	OFF	ON	OFF	OFF	OFF	OFF	ON
162	ON	OFF	ON	OFF	OFF	OFF	ON	OFF
163	ON	OFF	ON	OFF	OFF	OFF	ON	ON
164	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
165	ON	OFF	ON	OFF	OFF	ON	OFF	ON
166	ON	OFF	ON	OFF	OFF	ON	ON	OFF
167	ON	OFF	ON	OFF	OFF	ON	ON	ON
168	ON	OFF	ON	OFF	ON	OFF	OFF	OFF
169	ON	OFF	ON	OFF	ON	OFF	OFF	ON
170	ON	OFF	ON	OFF	ON	OFF	ON	OFF
171	ON	OFF	ON	OFF	ON	OFF	ON	ON
172	ON	OFF	ON	OFF	ON	ON	OFF	OFF
173	ON	OFF	ON	OFF	ON	ON	OFF	ON
174	ON	OFF	ON	OFF	ON	ON	ON	OFF
175	ON	OFF	ON	OFF	ON	ON	ON	ON
176	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
177	ON	OFF	ON	ON	OFF	OFF	OFF	ON
178	ON	OFF	ON	ON	OFF	OFF	ON	OFF
179	ON	OFF	ON	ON	OFF	OFF	ON	ON

ADDRESS	SW8	SW7	SW6	SW5	SW4	SW3	SW2	SW1
180	ON	OFF	ON	ON	OFF	ON	OFF	OFF
181	ON	OFF	ON	ON	OFF	ON	OFF	ON
182	ON	OFF	ON	ON	OFF	ON	ON	OFF
183	ON	OFF	ON	ON	OFF	ON	ON	ON
184	ON	OFF	ON	ON	ON	OFF	OFF	OFF
185	ON	OFF	ON	ON	ON	OFF	OFF	ON
186	ON	OFF	ON	ON	ON	OFF	ON	OFF
187	ON	OFF	ON	ON	ON	OFF	ON	ON
188	ON	OFF	ON	ON	ON	ON	OFF	OFF
189	ON	OFF	ON	ON	ON	ON	OFF	ON
190	ON	OFF	ON	ON	ON	ON	ON	OFF
191	ON	OFF	ON	ON	ON	ON	ON	ON
192	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
193	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
194	ON	ON	OFF	OFF	OFF	OFF	ON	OFF
195	ON	ON	OFF	OFF	OFF	OFF	ON	ON
196	ON	ON	OFF	OFF	OFF	ON	OFF	OFF
197	ON	ON	OFF	OFF	OFF	ON	OFF	ON
198	ON	ON	OFF	OFF	OFF	ON	ON	OFF
199	ON	ON	OFF	OFF	OFF	ON	ON	ON
200	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
201	ON	ON	OFF	OFF	ON	OFF	OFF	ON
202	ON	ON	OFF	OFF	ON	OFF	ON	OFF
203	ON	ON	OFF	OFF	ON	OFF	ON	ON
204	ON	ON	OFF	OFF	ON	ON	OFF	OFF
205	ON	ON	OFF	OFF	ON	ON	OFF	ON
206	ON	ON	OFF	OFF	ON	ON	ON	OFF
207	ON	ON	OFF	OFF	ON	ON	ON	ON
208	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
209	ON	ON	OFF	ON	OFF	OFF	OFF	ON
210	ON	ON	OFF	ON	OFF	OFF	ON	OFF
211	ON	ON	OFF	ON	OFF	OFF	ON	ON
212	ON	ON	OFF	ON	OFF	ON	OFF	OFF
213	ON	ON	OFF	ON	OFF	ON	OFF	ON
214	ON	ON	OFF	ON	OFF	ON	ON	OFF
215	ON	ON	OFF	ON	OFF	ON	ON	ON
216	ON	ON	OFF	ON	ON	OFF	OFF	OFF
217	ON	ON	OFF	ON	ON	OFF	OFF	ON
218	ON	ON	OFF	ON	ON	OFF	ON	OFF
219	ON	ON	OFF	ON	ON	OFF	ON	ON
220	ON	ON	OFF	ON	ON	ON	OFF	OFF
221	ON	ON	OFF	ON	ON	ON	OFF	ON
222	ON	ON	OFF	ON	ON	ON	ON	OFF
223	ON	ON	OFF	ON	ON	ON	ON	ON
224	ON	ON	ON	OFF	OFF	OFF	OFF	OFF

ADDRESS	SW8	SW7	SW6	SW5	SW4	SW3	SW2	SW1
225	ON	ON	ON	OFF	OFF	OFF	OFF	ON
226	ON	ON	ON	OFF	OFF	OFF	ON	OFF
227	ON	ON	ON	OFF	OFF	OFF	ON	ON
228	ON	ON	ON	OFF	OFF	ON	OFF	OFF
229	ON	ON	ON	OFF	OFF	ON	OFF	ON
230	ON	ON	ON	OFF	OFF	ON	ON	OFF
231	ON	ON	ON	OFF	OFF	ON	ON	ON
232	ON	ON	ON	OFF	ON	OFF	OFF	OFF
233	ON	ON	ON	OFF	ON	OFF	OFF	ON
234	ON	ON	ON	OFF	ON	OFF	ON	OFF
235	ON	ON	ON	OFF	ON	OFF	ON	ON
236	ON	ON	ON	OFF	ON	ON	OFF	OFF
237	ON	ON	ON	OFF	ON	ON	OFF	ON
238	ON	ON	ON	OFF	ON	ON	ON	OFF
239	ON	ON	ON	OFF	ON	ON	ON	ON
240	ON	ON	ON	ON	OFF	OFF	OFF	OFF
241	ON	ON	ON	ON	OFF	OFF	OFF	ON
242	ON	ON	ON	ON	OFF	OFF	ON	OFF
243	ON	ON	ON	ON	OFF	OFF	ON	ON
244	ON	ON	ON	ON	OFF	ON	OFF	OFF
245	ON	ON	ON	ON	OFF	ON	OFF	ON
246	ON	ON	ON	ON	OFF	ON	ON	OFF
247	ON	ON	ON	ON	OFF	ON	ON	ON
248	ON	ON	ON	ON	ON	OFF	OFF	OFF
249	ON	ON	ON	ON	ON	OFF	OFF	ON
250	ON	ON	ON	ON	ON	OFF	ON	OFF
251	ON	ON	ON	ON	ON	OFF	ON	ON
252	ON	ON	ON	ON	ON	ON	OFF	OFF
253	ON	ON	ON	ON	ON	ON	OFF	ON
254	ON	ON	ON	ON	ON	ON	ON	OFF
255	ON	ON	ON	ON	ON	ON	ON	ON

Replacement Parts List

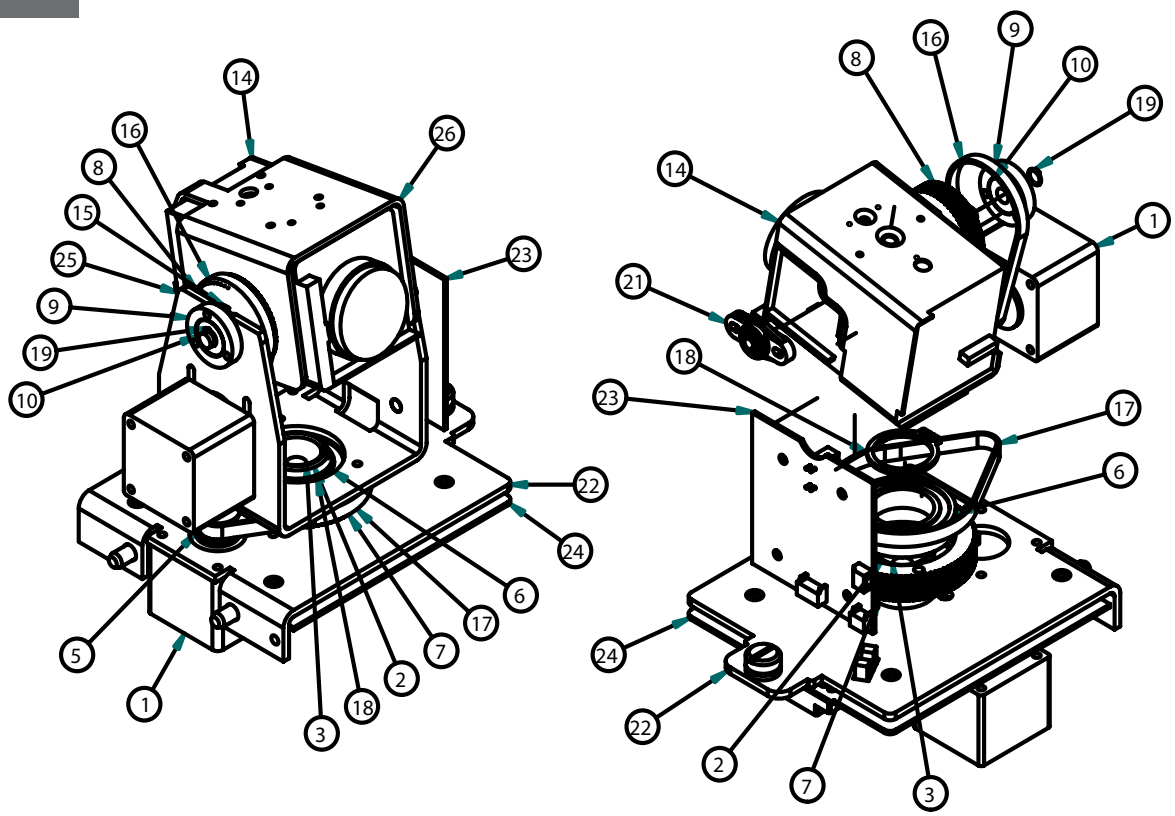

	Part No.	Description
1	**RP6039mm1.8**	Motor (2)
2	**RPVL2314**	Hub Bracket
3	**RP40CASL385**	Slip Ring Assembly (2)
5	**RPVL2315**	20T 80 Pitch Pulley (2)
6	**RP605007**	Bearing
7	**RPVL2316**	90T Pan Pulley
8	**RPVL2318**	60T Tilt Pulley
9	**RPVL2320**	Tilt Bearing Hub
10	**RP605011**	Bearing
14	**RP73CAVKS454**	23 X Zoom Camera
15	**RP92WSFN11**	Nylon Washer (2)
16	**RP605009**	Tilt Belt
17	**RP605008**	Pan belt
18	**RP95FSSR06**	Retaining ring (large)
19	**RP95FSSR07**	Retaining ring
21	**RP605010**	Tilt Bearing
22	**RPVL2312R1**	Quick Release Bracket
23	**RP76V385T**	Tilt PCB
24	**RP76V385P**	Main PCB
25*	**RPVL2317**	Tilt Bracket
26*	**RPVL2321**	Camera Bracket

Product Registration/Warranty

Thank you for choosing Videolarm. We value your patronage and are solely committed to providing you with only the highest quality products available with unmatched customer service levels that are second-to-none in the security industry.

Should a problem arise, rest assure that Videolarm stands behind its products by offering some of the most impressive warranty plans available: 3 Years on all Housings, Poles, Power Supplies, and Accessories and 5 Years on all camera systems (SView, QView, Warriors), and InfraRed Illuminators.

Register Your Products

Option 1: **Online** Option 2: **Mail-In**

Take a few moments and validate your purchase with our Online Product Registration Form at www.videolarm.com/productregistration.jsp or complete and mail-in the bottom portion of this flyer.

Register your recent Videolarm purchases and benefit from the following:

- Simple and Trouble-Free RMA process
- Added into customer database to receive product updates / news
- Eliminate the need to archive original purchase documents: Receipts, Purchase Orders, etc…

Cut at the dotted Line

Place in envelope, affix stamp and mail to:

Videolarm ATTN: Warranty
2525 Park Central Ave.
Decatur, GA 30035

Main Contact Info

First Name: _____ Last Name: _____

Professional Title: _____ Company: _____

Address 1: _____ Address 2: _____

City: _____ State / Province/Country: _____

Zip / Postal Code: _____ Phone Number: _____ E-mail Address: _____

Product Information

Please Circle One: Business Personal

Name & Location of Company / Store where Purchased: _____
(City, State, Country)

Videolarm Product ID _____ Product Description _____

Serial # _____
(Available only for Camera Systems, IR Illuminators, Wireless Devices)

PO# _____